


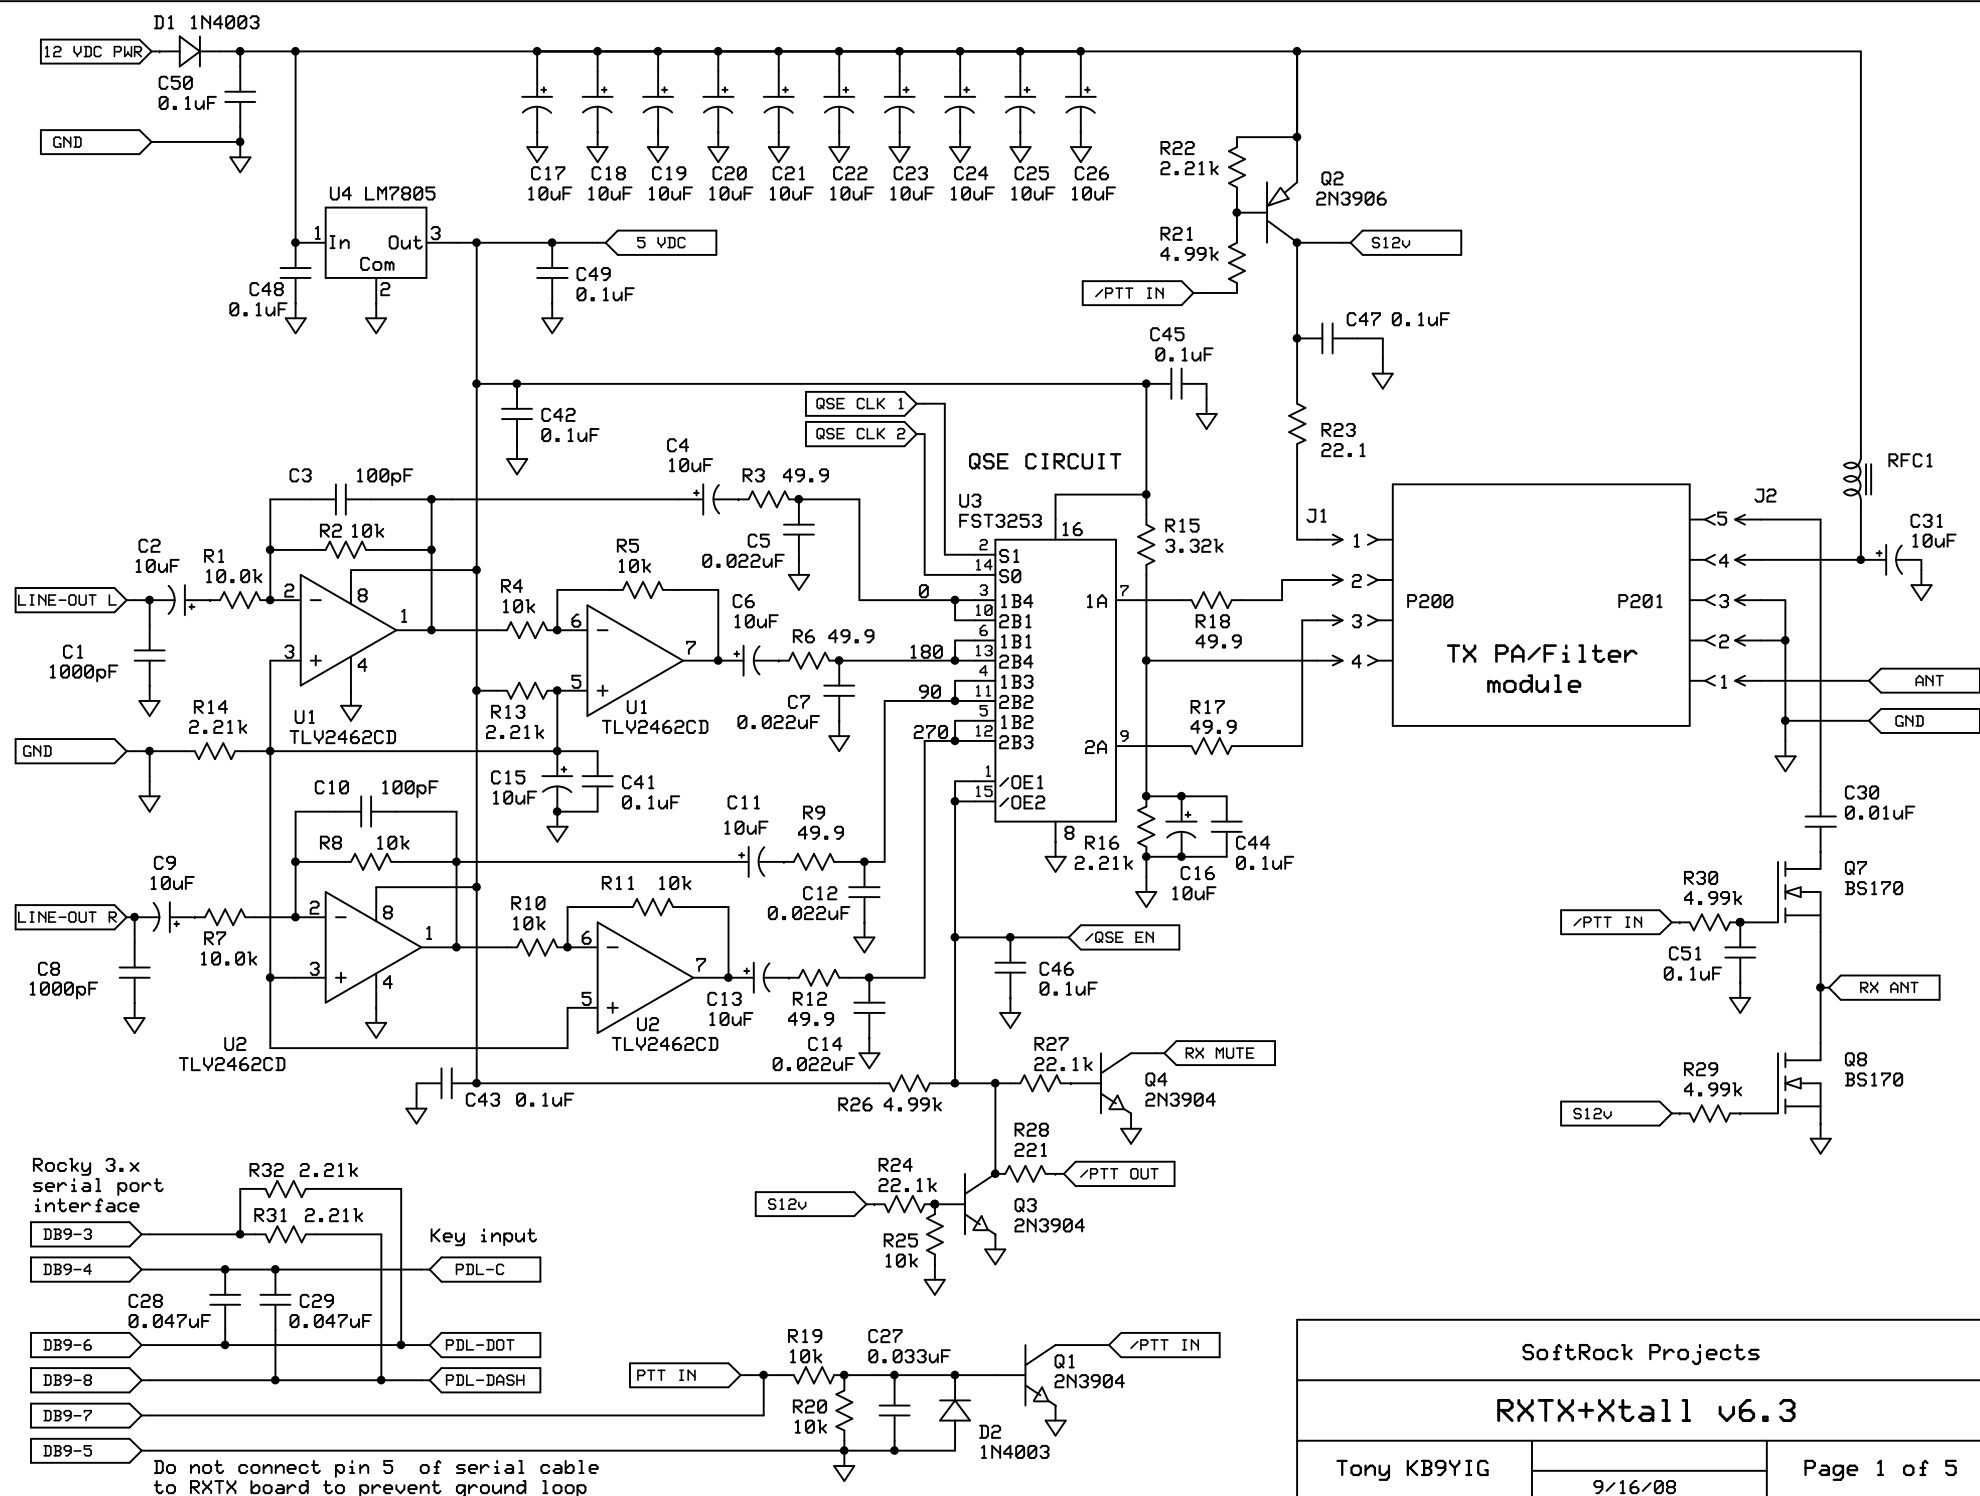

Do not connect pin 5 of serial cable to RXTX board to prevent ground loop